



MultiConnect® Conduit™ AP

MTCAP User Guide for North America



MultiConnect Conduit AP MTCAP User Guide for North America

Models: MTCAP-915-001L, MTCAP-LNA3-915-001L

Part Number: S000659, Version 1.0

Copyright

This publication may not be reproduced, in whole or in part, without the specific and express prior written permission signed by an executive officer of Multi-Tech Systems, Inc. All rights reserved. **Copyright © 2017 by Multi-Tech Systems, Inc.**

Multi-Tech Systems, Inc. makes no representations or warranties, whether express, implied or by estoppels, with respect to the content, information, material and recommendations herein and specifically disclaims any implied warranties of merchantability, fitness for any particular purpose and non-infringement.

Multi-Tech Systems, Inc. reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of Multi-Tech Systems, Inc. to notify any person or organization of such revisions or changes.

Trademarks and Registered Trademarks

MultiTech, and the MultiTech logo, DeviceHQ, and MultiConnect are registered trademarks and Conduit is a trademark of Multi-Tech Systems, Inc. All other products and technologies are the trademarks or registered trademarks of their respective holders.

Legal Notices

The MultiTech products are not designed, manufactured or intended for use, and should not be used, or sold or re-sold for use, in connection with applications requiring fail-safe performance or in applications where the failure of the products would reasonably be expected to result in personal injury or death, significant property damage, or serious physical or environmental damage. Examples of such use include life support machines or other life preserving medical devices or systems, air traffic control or aircraft navigation or communications systems, control equipment for nuclear facilities, or missile, nuclear, biological or chemical weapons or other military applications (“Restricted Applications”). Use of the products in such Restricted Applications is at the user’s sole risk and liability.

MULTITECH DOES NOT WARRANT THAT THE TRANSMISSION OF DATA BY A PRODUCT OVER A CELLULAR COMMUNICATIONS NETWORK WILL BE UNINTERRUPTED, TIMELY, SECURE OR ERROR FREE, NOR DOES MULTITECH WARRANT ANY CONNECTION OR ACCESSIBILITY TO ANY CELLULAR COMMUNICATIONS NETWORK. MULTITECH WILL HAVE NO LIABILITY FOR ANY LOSSES, DAMAGES, OBLIGATIONS, PENALTIES, DEFICIENCIES, LIABILITIES, COSTS OR EXPENSES (INCLUDING WITHOUT LIMITATION REASONABLE ATTORNEYS FEES) RELATED TO TEMPORARY INABILITY TO ACCESS A CELLULAR COMMUNICATIONS NETWORK USING THE PRODUCTS.

The MultiTech products and the final application of the MultiTech products should be thoroughly tested to ensure the functionality of the MultiTech products as used in the final application. The designer, manufacturer and reseller has the sole responsibility of ensuring that any end user product into which the MultiTech product is integrated operates as intended and meets its requirements or the requirements of its direct or indirect customers. MultiTech has no responsibility whatsoever for the integration, configuration, testing, validation, verification, installation, upgrade, support or maintenance of such end user product, or for any liabilities, damages, costs or expenses associated therewith, except to the extent agreed upon in a signed written document. To the extent MultiTech provides any comments or suggested changes related to the application of its products, such comments or suggested changes is performed only as a courtesy and without any representation or warranty whatsoever.

Contacting MultiTech

Knowledge Base

The Knowledge Base provides immediate access to support information and resolutions for all MultiTech products. Visit <http://www.multitech.com/kb.go>.

Support Portal

To create an account and submit a support case directly to our technical support team, visit: <https://support.multitech.com>.

Support

Business Hours: M-F, 8am to 5pm CT

| Country | By Email | By Phone |
|------------------------------|-------------------------|----------------------------------|
| Europe, Middle East, Africa: | support@multitech.co.uk | +(44) 118 959 7774 |
| U.S., Canada, all others: | support@multitech.com | (800) 972-2439 or (763) 717-5863 |

Warranty

To read the warranty statement for your product, visit www.multitech.com/warranty.go. For other warranty options, visit www.multitech.com/es.go.

World Headquarters

Multi-Tech Systems, Inc.
 2205 Woodale Drive, Mounds View, MN 55112
 Phone: (800) 328-9717 or (763) 785-3500
 Fax (763) 785-9874

Contents

| | |
|--|-----------|
| Chapter 1 – Chapter 1 Product Overview | 5 |
| Overview | 5 |
| Product Build Options | 5 |
| Package Contents | 5 |
| Documentation Overview | 6 |
| Related Documentation | 6 |
| Chapter 2 – Chapter 2 Specifications and Hardware Information | 7 |
| Dimensions | 7 |
| MTCAP Specifications | 8 |
| Connectors and LEDs | 9 |
| Resetting the Device | 10 |
| Power Measurements | 10 |
| MTCAP-LNA1-915 | 10 |
| MTCAP-915-001L | 11 |
| Chapter 3 – Chapter 3 Safety Information | 12 |
| Power Supply Caution | 12 |
| Ethernet Ports | 12 |
| Ports Ethernet | 12 |
| Lithium Battery | 12 |
| General Safety | 12 |
| Handling Precautions | 13 |
| Radio Frequency (RF) Safety | 13 |
| Sécurité relative aux appareils à radiofréquence (RF) | 13 |
| Interference with Pacemakers and Other Medical Devices | 14 |
| Potential interference | 14 |
| Precautions for pacemaker wearers | 14 |
| Device Maintenance | 14 |
| UL Notice | 15 |
| Spécifications UL | 15 |
| User Responsibility | 15 |
| Chapter 4 – Chapter 4 Labels | 16 |
| Example Labels | 16 |
| Chapter 5 – Setting Up Hardware | 17 |
| Installing a SIM Card | 17 |
| Removing a SIM Card | 17 |
| Cabling the Device | 17 |

| | |
|---|-----------|
| Chapter 6 – Getting Started with mLinux Models | 19 |
| Accessing the Terminal Interface..... | 19 |
| Setting Time Zone, Time, and Date..... | 19 |
| Set Custom IP Address, Network Information, and Ethernet Internet Access | 20 |
| Configure the Cellular Connection..... | 20 |
| Starting Cellular Connection on Boot | 21 |
| Configuring LoRa | 22 |
| Additional LoRa and mLinux Information | 22 |
| Chapter 7 – Getting Started with AEP Models | 23 |
| Logging in to AEP..... | 23 |
| Setting the Password | 23 |
| Setting Date and Time..... | 23 |
| Configuring PPP..... | 23 |
| Setting Up PPP Authentication | 24 |
| Enter IP Address and Network Information..... | 24 |
| Configuring Access | 24 |
| Finish Configuration | 24 |
| Using DeviceHQ for Device Management..... | 25 |
| Chapter 8 – Mounting the Device | 26 |
| Mounting the Device..... | 26 |
| You will need..... | 26 |
| Determining Location for the MTCAP | 26 |
| Mounting the MTCAP | 27 |
| Chapter 9 – Chapter 6 Regulatory and Environmental Information | 29 |
| 47 CFR Part 15 Regulation Class B Devices | 29 |
| FCC Interference Notice | 29 |
| Industry Canada Class B Notice..... | 29 |
| Industry Canada | 30 |
| Waste Electrical and Electronic Equipment Statement | 30 |
| WEEE Directive..... | 30 |
| Instructions for Disposal of WEEE by Users in the European Union | 30 |
| REACH Statement | 30 |
| Registration of Substances..... | 30 |
| Substances of Very High Concern (SVHC) | 31 |
| Restriction of the Use of Hazardous Substances (RoHS) | 31 |
| Information on HS/TS Substances According to Chinese Standards | 32 |
| Information on HS/TS Substances According to Chinese Standards (in Chinese) | 33 |
| Index | 34 |

Chapter 1 – Chapter 1 Product Overview

Overview

MultiConnect Conduit AP (MTCAP) connects thousands of IoT assets to the cloud using the LoRaWAN[®] protocol. It expands LoRa network coverage to difficult to reach areas and is capable of packet forwarding user data between LoRa end points and a centrally located network server on the cloud, in a data center, or a public network.

Product Build Options

| Product | Description |
|---------------------|---|
| MTCAP-LNA3-915-001L | MultiConnect Conduit Access Point with LTE, LoRa 915 MHz and mLinux |
| MTCAP-915-001L | MultiConnect Conduit Access Point with LoRa 915 MHz and mLinux |
| MTCAP-LNA3-915-001A | MultiConnect Conduit Access Point with LTE, LoRa 915 MHz and AEP |
| MTCAP-915-001A | MultiConnect Conduit Access Point with LoRa 915 MHz and AEP |

Note:

- The complete product code may end in .Rx, where R is revision and 1 is the revision number. For example, MTCAP-LNA3-915-001L-R1.

Package Contents

Your device ships with the following:

- 1 – MTCAP
- 1 – 5 Volt, 2.5 Amp Power supply
- 1 – RJ45 Ethernet cable
- 1 – Quick Start

Important: Contact MultiTech Systems if a replacement power supply is needed. Using a different power supply may damage the device and voids the warranty.

Documentation Overview

The following documents are available at <http://www.multitech.com/brands/multiconnect-conduit-ap>.


| Document | Description | Part Number |
|--|---|----------------------|
| MultiConnect Conduit AP MTCAP User Guide for North America | This document. Hardware, regulatory, and getting started information. | S000659 |
| MultiConnect Conduit AP MTCAP for mLinux Quick Start | Steps for getting started for mLinux models. Ships with the device and is available online. | 82102350L |
| MultiConnect Conduit AP MTCAP for AEP Quick Start | Steps for getting started for mLinux models. Ships with the device and is available online. | 82102850L |
| Telit LE910 AT Commands Reference Guide | For LNA devices, lists AT Commands and parameters used to communicate with your device. | 80407ST10116A Rev 14 |

Related Documentation

This manual provides the basics for getting started with mLinux or AEP. For addition information, visit our developer site at <http://multitech.net> and select Software > mLinux.

Chapter 2 – Chapter 2 Specifications and Hardware Information

Dimensions

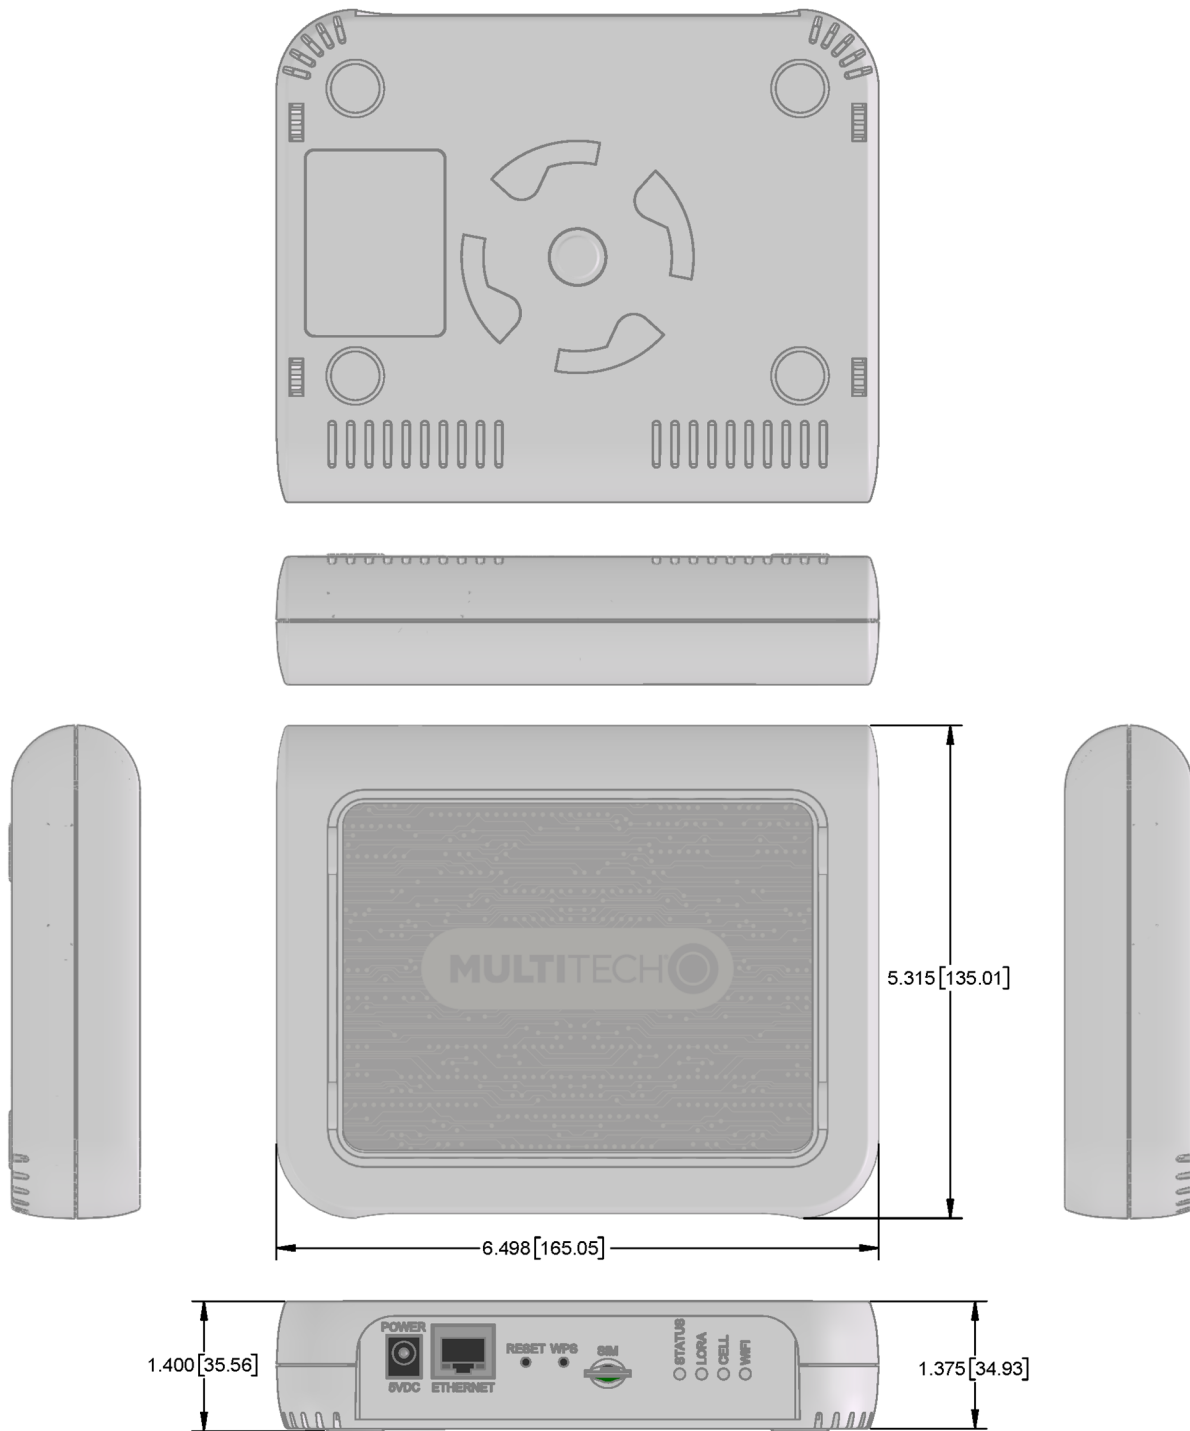


DIMENSIONS IN In [mm]

MTCAP Specifications

| Category | Description |
|--------------------------------------|---|
| General | |
| Standards | LoRaWAN 1.0.2 specifications |
| | LTE 3GPP Release 9 |
| | HSPA+ with GPRS fallback |
| RAM | 256MB |
| Flash | 256MB |
| Radio Frequency | |
| ISM Band | 915 MHz ISM band for US and Canada |
| 4G/LTE | 1900 (B2) / AWS 1700 (B4) / 850 (B5) / 700 (B12/13) |
| 3G | 1900 (B2) / 850 (B6) |
| Physical Description | |
| Weight | 1.36 kg |
| Dimensions | Refer to Mechanical Drawings for Dimensions. |
| Chassis Type | PC-ABS |
| Environment | |
| Operating Temperature ¹ | 0° C to +70° C |
| Storage Temperature | -40° C to +85° C |
| Humidity | 20%-90% RH, non-condensing |
| Power Requirements | |
| Operating Voltage | 5Vdc, 1.4A |
| Certifications and Compliance | |
| EMC and Radio Compliance | FCC Part 15 Class B |
| | EN 300-220 |
| | EN 300-440 |
| Safety Compliance | UL 60950-1 2nd ED |
| | cUL 60950-1 2nd ED |
| | IEC 60950-1 2nd ED AM1 and AM2 |

¹ UL listed at 40° C, limited by AC power supply. Product has been tested to +70° C excluding power supply.

Connectors and LEDs

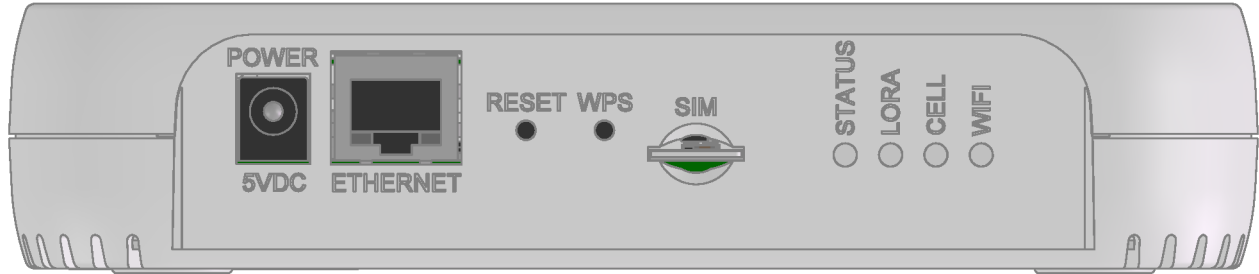

Note: Some features are available only on select models. The above image shows the model with all features. For models that don't have a cellular radio, the chassis will not have a SIM slot.

| Item | Description |
|-------------------|---|
| Connectors | |
| Power | 5 Volt power jack. |
| Ethernet | RJ45 Ethernet jack. |
| Reset | Reset button. Reboots the device or restores factory defaults. Refer to Resetting the Device for details. |
| WPS | Reserved for future use. |
| SIM | Available in and -LNA3 models only. SIM slot. Refer to Installing SIM Card for details. |
| LEDs | |
| STATUS | Blinks when operating system is fully loaded. |
| LORA | Lights when LoRa software is active. |
| CELL | Used by and -LNA3 models only. Lights when there is power to the cellular radio. Blinks when the SIM is registered with the carrier. |
| WIFI | Used by -002 models only. Lights when there is a Wi-Fi connection. |
| Ethernet Link | Left LED on the Ethernet connector. Blinks when there is transmit and receive activity on the Ethernet link. It shows a steady light when there is a valid Ethernet connection. |
| Ethernet Speed | Right LED on the Ethernet connector. Lit when the Ethernet is linked at 100 Mbps. If it is not lit, the Ethernet is linked at 10 Mbps. |

Resetting the Device

You need:

- A pin, paperclip, or similar thin object that can fit into the reset hole

To reset the device:

1. Find the hole labeled RESET. The reset button is recessed into the case.
2. Use the pin to press and release the RESET button as follows:

Reset options:

- To reboot, press RESET for less than 3 seconds.
- To reboot and restore user-defined defaults (if previously set), press RESET for 3 to 29 seconds.
- To reboot, restore factory settings, and erase user-defined defaults, press RESET for 30 seconds or longer.

Note: The device reboots when restoring settings.

Power Measurements

MTCAP-LNA1-915

Note:

- Multi-Tech Systems, Inc. recommends that you incorporate a 10% buffer into the power source when determining product load.
- **Maximum Power:** The continuous current during maximum data rate with the radio transmitter at maximum power.
- **Tx Pulse:** The average peak current during a GSM850 transmission burst period or HSDPA/LTE connection. The transmission burst duration for GSM850 can vary, depending on what transmission scheme is being deployed (GPRS Class 8, Class 10, GSM, etc.).
- **Inrush Charge:** The total inrush charge at power on.

| Radio Protocol | Live Connection (SIM Installed) No Data | Cellular Call Box Connection, No Data | Average Measured Current at Maximum Power | TX Pulse (AVG) Amplitude Current for GSM850 or Peak Current for HSDPA/LTE | Total Inrush Charge Measured in Millicoulomb |
|------------------|---|---------------------------------------|---|---|--|
| 5.0 Volts | | | | | |
| WCDMA 1850MHz | 200 mA | 178 mA | 1.06 Amps | 1.32 Amps | 1.95 mC |
| LTE | 182 mA | 260 mA | 915 mA | 1.1 Amps | 1.95 mC |

MTCAP-915-001L

Note:

- Multi-Tech Systems, Inc. recommends that you incorporate a 10% buffer into the power source when determining product load.
- **Maximum Power:** MTCAP LoRa connection to MTXDOT running TXP =20 and at+txdr=2. The MTXDOT was initialized to send packets by joining MTCAP and rapidly sending packet to the MTCAP.
- **Tx Pulse:** The average peak current.
- **Inrush Charge:** The total inrush charge at power on.

| Idle Current | Average Measured Current at Maximum Power | TX Pulse Peak Current for no radio model | Total Inrush Charge Measured in Millicoulomb |
|------------------|---|--|--|
| 5.0 Volts | | | |
| 128 mA | 397 mA | 524 mA | 1.33 mC |

Chapter 3 – Chapter 3 Safety Information

Power Supply Caution

CAUTION: Do not replace the power supply with one designed for another product; doing so can damage the modem and void your warranty. Adapter shall be installed near the equipment and shall be easily accessible.

CAUTION: Pour garantir une protection continue contre les risques d'incendie, remplacez les fusibles uniquement par des fusibles du même type et du même calibre. L'adaptateur doit être installé à proximité de l'appareil et doit être facilement accessible.

Ethernet Ports

CAUTION: Ethernet ports and command ports are not designed to be connected to a public telecommunication network or used outside the building or campus.

Ports Ethernet

CAUTION: Les ports Ethernet et de commande ne sont pas conçus pour être raccordés à un réseau de télécommunications public ou utilisé à l'extérieur du bâtiment.

Lithium Battery

- A lithium battery (3V, coin cell, CR1632) located within the product provides backup power for the timekeeping. This battery has an estimated life expectancy of ten years.
- When this battery starts to weaken, the date and time may be incorrect.
- Battery is not user replaceable. If the battery fails, the device must be sent back to MultiTech Systems for battery replacement.
- Lithium cells and batteries are subject to the Provisions for International Transportation. Multi-Tech Systems, Inc. confirms that the Lithium batteries used in the MultiTech product(s) referenced in this manual comply with Special Provision 188 of the UN Model Regulations, Special Provision A45 of the ICAO-TI/IATA-DGR (Air), Special Provision 310 of the IMDG Code, and Special Provision 188 of the ADR and RID (Road and Rail Europe).

CAUTION: Risk of explosion if this battery is replaced by an incorrect type. Dispose of batteries according to instructions.

Attention: Risque d'explosion si vous remplacez la batterie par un modèle incompatible. Jetez les piles usagées selon les instructions.

General Safety

The device is designed for and intended to be used in fixed and mobile applications. Fixed means the device is physically secured at one location and cannot be easily moved to another location. Mobile means the device is used in other than fixed locations.

CAUTION: Maintain a separation distance of at least 20 cm (8 inches) between the transmitter's antenna and the body of the user or nearby persons. The device is not designed for or intended to be used in portable applications within 20 cm (8 inches) of the user's body.

Attention: Maintenir une distance d'au moins 20 cm (8 po) entre l'antenne du récepteur et le corps de l'utilisateur ou à proximité de personnes. Le modem n'est pas conçu pour, ou destinés à être utilisés dans les applications portables, moins de 20 cm du corps de l'utilisateur.

Handling Precautions

To avoid damage due to the accumulation of static charge, use proper precautions when handling any cellular device. Although input protection circuitry has been incorporated into the devices to minimize the effect of static build-up, use proper precautions to avoid exposure to electronic discharge during handling and mounting the device.

Radio Frequency (RF) Safety

Due to the possibility of radio frequency (RF) interference, it is important that you follow any special regulations regarding the use of radio equipment. Follow the safety advice given below.

- Operating your device close to other electronic equipment may cause interference if the equipment is inadequately protected. Observe any warning signs and manufacturers' recommendations.
- Different industries and businesses restrict the use of cellular devices. Respect restrictions on the use of radio equipment in fuel depots, chemical plants, or where blasting operations are in process. Follow restrictions for any environment where you operate the device.
- Do not place the antenna outdoors.
- Switch OFF your wireless device when in an aircraft. Using portable electronic devices in an aircraft may endanger aircraft operation, disrupt the cellular network, and is illegal. Failing to observe this restriction may lead to suspension or denial of cellular services to the offender, legal action, or both.
- Switch OFF your wireless device when around gasoline or diesel-fuel pumps and before filling your vehicle with fuel.
- Switch OFF your wireless device in hospitals and any other place where medical equipment may be in use.

Sécurité relative aux appareils à radiofréquence (RF)

À cause du risque d'interférences de radiofréquence (RF), il est important de respecter toutes les réglementations spéciales relatives aux équipements radio. Suivez les conseils de sécurité ci-dessous.

- Utiliser l'appareil à proximité d'autres équipements électroniques peut causer des interférences si les équipements ne sont pas bien protégés. Respectez tous les panneaux d'avertissement et les recommandations du fabricant.
- Certains secteurs industriels et certaines entreprises limitent l'utilisation des appareils cellulaires. Respectez ces restrictions relatives aux équipements radio dans les dépôts de carburant, dans les usines de produits chimiques, ou dans les zones où des dynamitages sont en cours. Suivez les restrictions relatives à chaque type d'environnement où vous utiliserez l'appareil.
- Ne placez pas l'antenne en extérieur.
- Éteignez votre appareil sans fil dans les avions. L'utilisation d'appareils électroniques portables en avion est illégale: elle peut fortement perturber le fonctionnement de l'appareil et désactiver le réseau cellulaire. S'il ne respecte pas cette consigne, le responsable peut voir son accès aux services cellulaires suspendu ou interdit, peut être poursuivi en justice, ou les deux.
- Éteignez votre appareil sans fil à proximité des pompes à essence ou de diesel avant de remplir le réservoir de votre véhicule de carburant.

- Éteignez votre appareil sans fil dans les hôpitaux ou dans toutes les zones où des appareils médicaux sont susceptibles d'être utilisés.

Interference with Pacemakers and Other Medical Devices

Potential interference

Radio frequency energy (RF) from cellular devices can interact with some electronic devices. This is electromagnetic interference (EMI). The FDA helped develop a detailed test method to measure EMI of implanted cardiac pacemakers and defibrillators from cellular devices. This test method is part of the Association for the Advancement of Medical Instrumentation (AAMI) standard. This standard allows manufacturers to ensure that cardiac pacemakers and defibrillators are safe from cellular device EMI.

The FDA continues to monitor cellular devices for interactions with other medical devices. If harmful interference occurs, the FDA will assess the interference and work to resolve the problem.

Precautions for pacemaker wearers

If EMI occurs, it could affect a pacemaker in one of three ways:

- Stop the pacemaker from delivering the stimulating pulses that regulate the heart's rhythm.
- Cause the pacemaker to deliver the pulses irregularly.
- Cause the pacemaker to ignore the heart's own rhythm and deliver pulses at a fixed rate.

Based on current research, cellular devices do not pose a significant health problem for most pacemaker wearers. However, people with pacemakers may want to take simple precautions to be sure that their device doesn't cause a problem.

- Keep the device on the opposite side of the body from the pacemaker to add extra distance between the pacemaker and the device.
- Avoid placing a turned-on device next to the pacemaker (for example, don't carry the device in a shirt or jacket pocket directly over the pacemaker).

Device Maintenance

When maintaining your device:

- Do not attempt to disassemble the device. There are no user serviceable parts inside.
- Do not misuse the device. Follow instructions on proper operation and only use as intended. Misuse could make the device inoperable, damage the device and/or other equipment, or harm users.
- Do not apply excessive pressure or place unnecessary weight on the device. This could result in damage to the device or harm to users .
- Do not use this device in explosive or hazardous environments unless the model is specifically approved for such use. The device may cause sparks. Sparks in explosive areas could cause explosion or fire and may result in property damage, severe injury, and/or death.
- Do not expose your device to any extreme environment where the temperature or humidity is high. Such exposure could result in damage to the device or fire.
- Do not expose the device to water, rain, or spilled beverages. It is not waterproof. Exposure to liquids could result in damage to the device.

- Do not place the device alongside computer discs, credit or travel cards, or other magnetic media. The information contained on discs or cards may be affected by the device.
- Using accessories, such as antennas, that MultiTech has not authorized or that are not compliant with MultiTech's accessory specifications may invalidate the warranty.

If the device is not working properly, contact MultiTech Technical Support.

UL Notice

UL Listed at 40° C, limited by power supply. UL Certification does not apply or extend to an ambient above 40° C and has not been evaluated by UL for ambient greater than 40° C. "UL has evaluated this device for use in ordinary locations only. Installation in a vehicle or other outdoor locations has not been evaluated by UL. UL Certification does not apply or extend to use in vehicles or outdoor applications or in ambient above 40° C."

Spécifications UL

Listé UL à 40° C, limité par l'alimentation. La certification UL ne s'applique pas ou ne s'étend pas à des températures dépassant 40° C, et le produit n'a pas été évalué par UL pour une température ambiante dépassant 40° C. « UL a évalué cet appareil pour une utilisation en zone ordinaire uniquement. Le produit n'a pas été évalué par UL pour une installation dans un véhicule ou en extérieur. La certification UL ne s'applique pas ou ne s'étend pas aux applications dans un véhicule, en extérieur ou en présence d'une température ambiante supérieure à 40° C ».

User Responsibility

Respect all local regulations for operating your wireless device. Use the security features to block unauthorized use and theft.

Chapter 4 – Chapter 4 Labels

Example Labels


Note: Actual labels vary depending on the regulatory approval markings and content.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The label shown is not the actual size.

- 1 - MultiTech Model Identification.
- 2 - MultiTech Ordering Part Number.
- 3 - IMEI Number
- 4 - Device Node Number
- 5 - UUID

Example 915 Models Package Label

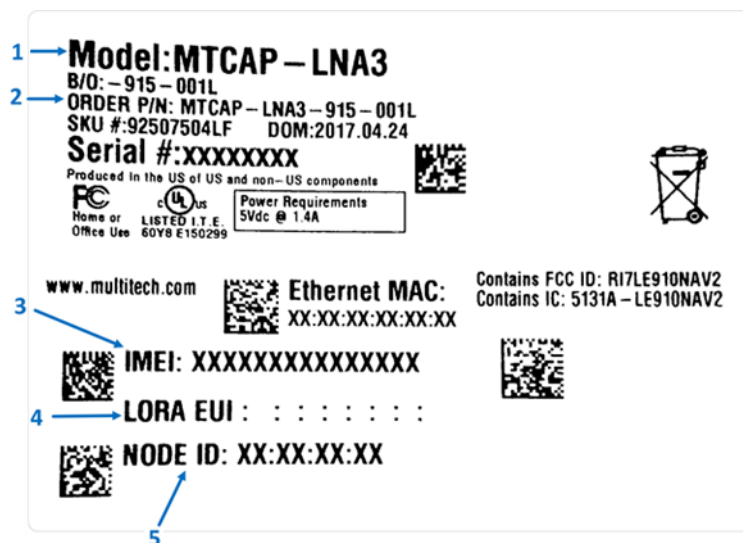

Chapter 5 – Setting Up Hardware

Installing a SIM Card

If you have a cellular device with a SIM slot, you'll need a micro SIM card from your network provider.

Note: The MTCAP-LNA3 works on both Verizon and AT&T networks. The MTCAP detects the carrier based on your SIM card.

To install the SIM card:

- With the contact side facing down, align the notched edge as shown on the following image and slide the SIM card completely into the SIM holder.



Removing a SIM Card

To remove the SIM card, push the SIM card in. The device ejects the SIM card.

Cabling the Device

To cable the device:

1. Connect the Ethernet cable to the Ethernet port on the device and to your computer.
2. Connect the power supply to the MTCAP's power jack and plug it into an electrical outlet. When the operating system is fully loaded, the STATUS LED blinks.

Once your device is cabled, follow the Getting Started chapter for your device:

- For models ending with -001L , go to [Getting Started with mLinux](#)
- For models ending with -001A, go to [Getting Started with AEP](#)

Chapter 6 – Getting Started with mLinux Models

Accessing the Terminal Interface

After connecting Ethernet and power, access the terminal interface:

1. On your PC, configure a static IP address for the network interface that is connected to the device within the following range:

```
192.168.2.2 – 192.168.2.254
```

2. Open an SSH connection.

Default IP address: (DHCP is disabled)

```
192.168.2.1
```

Default credentials: username:

```
root
```

and password:

```
root
```

3. If using **Linux**, issue the following command in your PC's terminal and then when prompted, enter the default password.

```
ssh root@192.168.2.1
```

If using **Windows**, do one of the following:

Install [Cygwin](#) and use the Linux instructions.

OR

Install [Tera Term](#) or [Putty](#) and open a new SSH connection on port 22 using the above defaults.

The device's terminal prompt appears.

```
root@mtcap:~#
```

Setting Time Zone, Time, and Date

To set the time zone, date, and time:

1. Create a symbolic link from the zone info file for your location to `/etc/localtime`:

```
ln -fs /usr/share/zoneinfo/Europe/Zurich /etc/localtime
```

2. Update the date and time to the current time:

```
date "2016-12-11 14:58:01"
```

3. Update the hardware clock:

```
hwclock -u -w
```

Set Custom IP Address, Network Information, and Ethernet Internet Access

Network configuration is defined in `/etc/network/interfaces`.

To set the IP address and network information:

1. To change the static IP, change the **address** and **netmask** fields in `/etc/network/interfaces`, (use vi or nano).
2. To apply changes, either reboot the device or issue:

```
ifdown eth0 && ifup eth0
```

Note: You'll lose your SSH session by doing this.

3. To enable DHCP with default settings, edit `/etc/udhcpd.conf` (use vi or nano) to issue:

```
mlinux-dhcpd start
```

Note: To stop or restart, issue:

```
mlinux-dhcpd stop
or
mlinux-dhcpd restart
.
```

4. To configure Internet access via the Ethernet port, modify `/etc/network/interfaces` as follows:
 - a. Add **gateway 192.168.2.254** beneath the **netmask** line, where **192.168.2.254** is the IP address of your network router.
 - b. To apply changes, either reboot the device or issue:


```
ifdown eth0 && ifup eth0
```

Note: You'll lose your SSH session by doing this.
 - c. Then test Internet access with **ping 8.8.8.8**.

Configure the Cellular Connection

To establish a cellular data link, you must configure and initiate a PPP connection. Sample options files and chat scripts are provided in the ppp peers directory `/etc/ppp/peers`. Anything specific to the network or connection should be placed in one of these files. Global options should be placed in `/etc/ppp/options`.

1. Set up a cellular data connection.

```
Set "APN" to the APN for your cellular provider. (Not necessary for
Verizon SIMs)
$ mlinux-set-apn APN
```

```
# Dial the connection (using /etc/ppp/peers/xxx# config)
$ pppd call xxx#
(where xxx# is your radio, LNA3 for North America or LEU1 for Europe)
```

2. Use the Linux **route** utility to verify ppp0 is up.

```
$ route
```

Kernel IP routing table

| Destination | Gateway | Genmask | Flags | Metric | Ref | Use | Iface |
|--------------|--------------|-----------------|-------|--------|-----|-----|-------|
| default | 33.140.12.18 | 0.0.0.0 | UG | 0 | 0 | 0 | ppp0 |
| 33.140.12.18 | * | 255.255.255.255 | UH | 0 | 0 | 0 | ppp0 |
| 192.168.2.0 | * | 255.255.255.0 | U | 0 | 0 | 0 | ethp0 |

The Linux **ifconfig** utility can be used to inspect the ppp0 interface details.

```
$ ifconfig ppp0
ppp0      Link encap:Point-to-Point Protocol
          inet addr:33.140.12.18  P-t-
P:33.140.12.18  Mask:255.255.255.255
          UP POINTOPOINT RUNNING NOARP MULTICAST  MTU:1500  Metric:1
          RX packets:7 errors:0 dropped:0 overruns:0 frame:0
          TX packets:8 errors:0 dropped:0 overruns:0 carrier:0
          collisions:0 txqueuelen:3
          RX bytes:106 (106.0 B)  TX bytes:145 (145.0 B)
```

Additionally, you can view the **pppd** logs in **/var/log/messages** to see the modem dialing and assigned IP address or errors if the connection was unsuccessful.

To Stop a PPP Connection

```
# send SIGTERM to pppd, which causes it to hang up and exit cleanly
$ killall pppd
```

Starting Cellular Connection on Boot

Automatically starting pppd on boot requires (1) setting the peer file to use and (2) telling the system to run the ppp init script on boot. To do this:

1. To see the available peers files (leu1) to set the peer file, issue:


```
ls /etc/ppp/peers
```
2. Edit **/etc/ppp/ppp_on_boot** (with vi or sudo) and change:


```
$PPPD call provider
to your desired provider (where xxx# is your radio, LNA3 for North America or LEU1 for Europe)
$PPPD call xxx#
```
3. Assuming you've already set your APN, manually start the init script and check your Internet connection to test your change


```
ppp_on_boot
$ /etc/init.d/ppp start
```
4. To set init script to auto start, issue:


```
$ update-rc.d ppp defaults
```
5. Restart and test your connection.

Stop Automatic Start Up

To stop ppp from automatically starting, issue:

```
$ update-rc.d -f ppp remove
```

Configuring LoRa

To configure LoRa:

1. Log in to the console, if you are not logged in.
2. Establish an Internet connection via Ethernet or cellular.
3. Edit the packet forwarder configuration as necessary by modifying `/opt/lora/local_conf.json` with vi or nano.

| | |
|---|--|
| <code>gateway_conf["server_address"]</code> | Set your LoRa network server address |
| <code>gateway_conf["serv_port_up"]</code> | Set the up port used by your LoRa network server |
| <code>gateway_conf["serv_port_down"]</code> | Set the down port used by your LoRa network server |

4. Start the packet forwarder:

```
$ /etc/init.d/lora-packet-forwarder start
```

For advanced LoRa settings, go to <http://www.multitech.net/developer/software/lora/conduit-mlinux-lora-communication/conduit-mlinux-advance-lora-configuration/>.

Additional LoRa and mLinux Information

For additional information, including how to configure LoRa devices to communicate with the MTCAP, visit <http://www.multitech.net>.

- For help using LoRa, go to: <http://www.multitech.net/developer/software/lora/>
- For help using mLinux, go to <http://www.multitech.net/developer/software/mlinux/>.

Chapter 7 – Getting Started with AEP Models

Logging in to AEP

After connecting and powering up your device, login to AEP:

1. Open an Internet browser. In the browser's address field, enter the device's default address for the device:

```
http://192.168.2.1
```

The login page appears.

2. Type the default user name: **admin**.
3. Type the default password: **admin**.
4. Click **Login** to start the First Time Setup Wizard.

Setting the Password

Note: For security reasons, we recommend you change the default password.

To set a new password:

1. Click **Next** on the Welcome panel.
2. In the **Current Password** field, enter the default password, **admin**.
3. In the **New Password** field, enter a new password.
4. Re-type the new password in the **Confirm Password** field.
5. Click **Next**.

Setting Date and Time

To set date and time:

1. Type today's **Date** in the format shown or use the calendar (data picker).
2. Type the current **Time** (24-hour format).
3. Select the **Time Zone** in which the Conduit operates.
4. Click **Next**.

Configuring PPP

Note: For models with cellular radios only.

To configure the Cellular PPP:

1. To use PPP, check **Enable**. When enabled, your device functions as a cellular device.
2. To enable dial-on-demand, check **Dial-on-Demand**. This tells the device to only make a PPP connection when there is outgoing IP traffic, and it brings the PPP connection down after a given idle timeout.
3. The default **Idle timeout** is **180 seconds**. If desired, you can enter a different value.
4. Type the **APN** (Access Point Name). The APN is assigned by your wireless service provider.
5. Click **Next**.

Setting Up PPP Authentication

To setup cellular PPP authentication:

1. Select an authentication protocol **Type** used to negotiate with the remote peer: **pap, chap, or pap-chap**. The default is **None**.
2. Type the **Username** for the remote peer to use for authentication. Optional. Username is limited to 60 characters.
3. Type the **Password** for the remote peer to use for authentication. Optional. Password is limited to 60 characters.
4. Click **Next** to exit the wizard.

Enter IP Address and Network Information

Set the IP address and network information for the Ethernet port:

Note: Leave the interface static unless using a DHCP server on the network that the device is connecting to. If you select DHCP client, you need to know which address is assigned to the Conduit. For information on DHCP settings, refer to DHCP in the AEP Help.

1. Type the device's **IP Address**
2. Enter the network **Mask**.
3. Enter the **Gateway** address (optional and not displayed when **Cellular** is enabled).
4. Enter the **Primary DNS** server address (optional and not displayed when **Cellular** is enabled).
5. Enter the **Secondary DNS** server address (optional and not displayed when **Cellular** is enabled).
6. Click **Next**.

Configuring Access

When Cellular is disabled, the default settings enable HTTPRedirect to HTTPs via LAN.

Note: Enabling **HTTPs via WAN** can increase security risk including allowing web users to access the WAN interface.

1. Under **HTTP Redirect to HTTPs**, check **Enabled** to turn on or uncheck to turn off.
2. Enter **Port** or use default value.
3. Check either **Via LAN** or **Via WAN**.
4. Under **HTTPs**, enter **Port** or use default value.
5. Click **Finish**.

Finish Configuration

When you finish entering basic settings:

1. To save and apply the settings, click **Save and Restart** near the top of the left sidebar. The device restarts.
2. After restart, log back into the AEP interface. On the Dashboard under **Cellular**, the PPP state displays **Link is Up**. You may have to wait for short time.
3. To configure a LoRa Network, refer to [Getting Started with LoRa](#)

Using DeviceHQ for Device Management

DeviceHQ is a cloud-based device management tool for remote monitoring, upgrades, and configuration AEP devices. For information on creating and using a DeviceHQ account, go to the <http://www.multitech.net/developer/software/devicehq/>.

Refer to document S000677, *DeviceHQ Deployment Guide for MTR5 and MTE Devices*.

Chapter 8 – Mounting the Device


Mounting the Device

The device ships with a mounting bracket.

You will need


- Mounting bracket
- MTCAP
- Four #6 screws, with anchors (not provided)
- Screwdriver
- Drill

Mounting Bracket

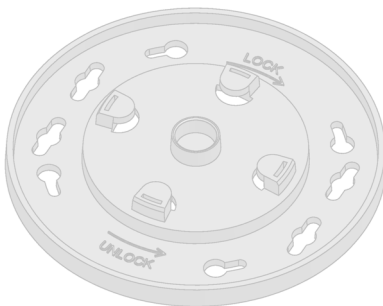


Determining Location for the MTCAP

- Select a location that is central to all the devices you want to connect to this MTCAP. Place the device as high as possible, such as near the top of a wall.
- Avoid obstructions. Thick walls and reflective surfaces, such as metal, weaken the signal between the MTCAP and other devices.
- Note the location of the LoRa antenna in the following image. The signal will be strongest radiating from that side of the device. The LoRa antenna is 31.2 mm long.
- The LoRa antenna is an omni-directional antenna, but for best results, mount the device so the LoRa antenna is in a vertical position near the top of a wall. We recommend conducting a site survey to test the signal strength in different locations before you mount the device.

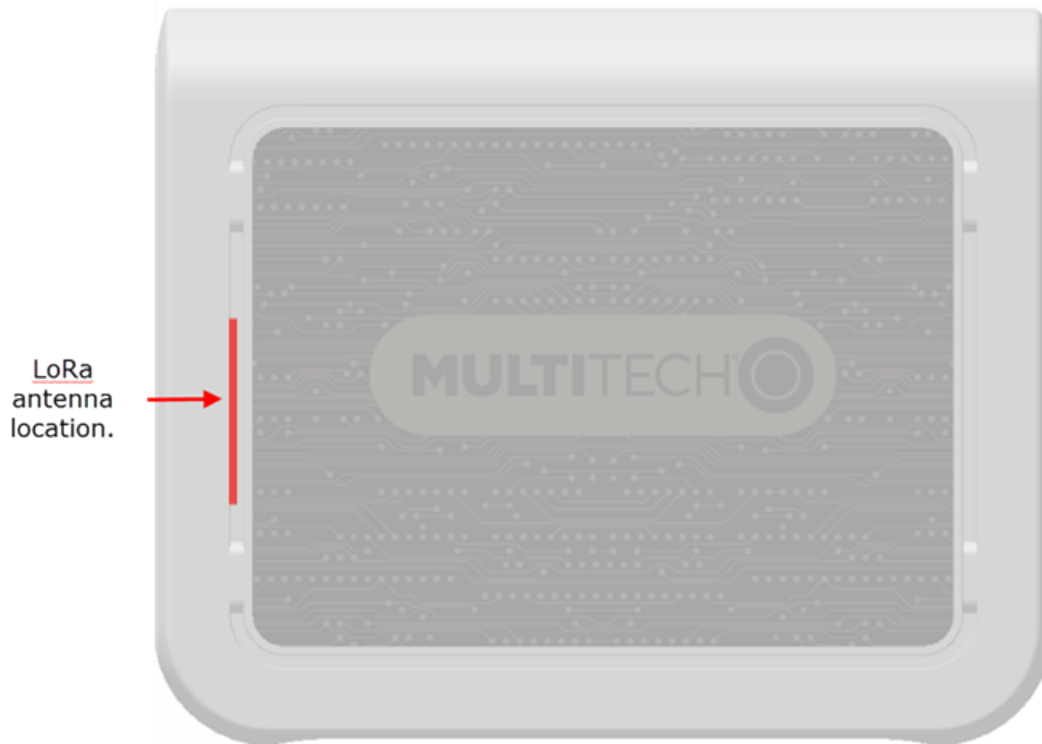


Mounting the MTCAP

1. Determine where you want to mount the device.
2. Mark where you want the screws to go.

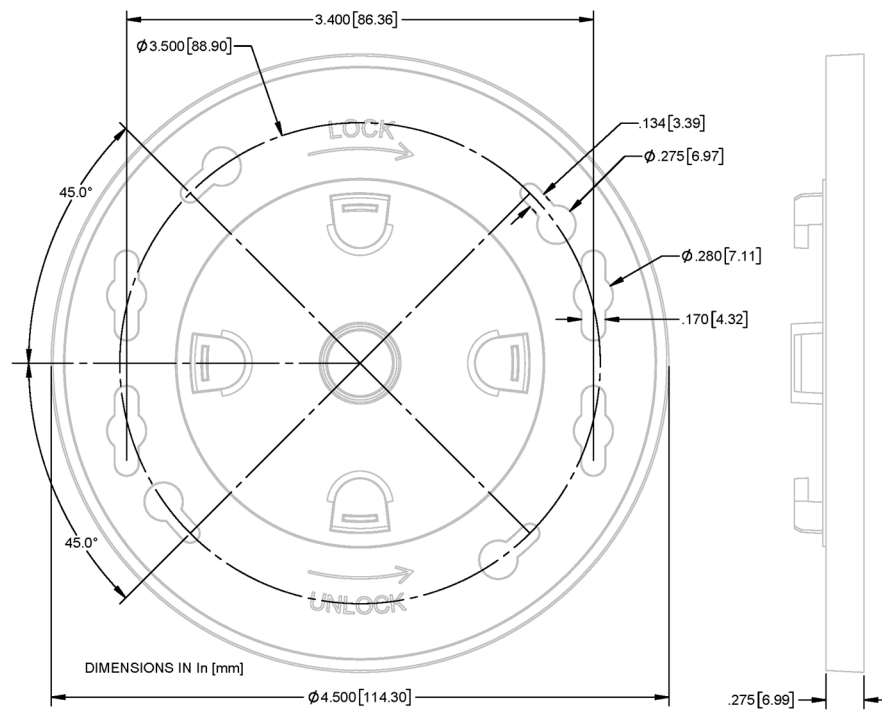

3. Drill holes for the screws and insert anchors.

4. Place the mounting bracket and secure it with screws.
5. Attach the device to the bracket and rotate to lock into place.

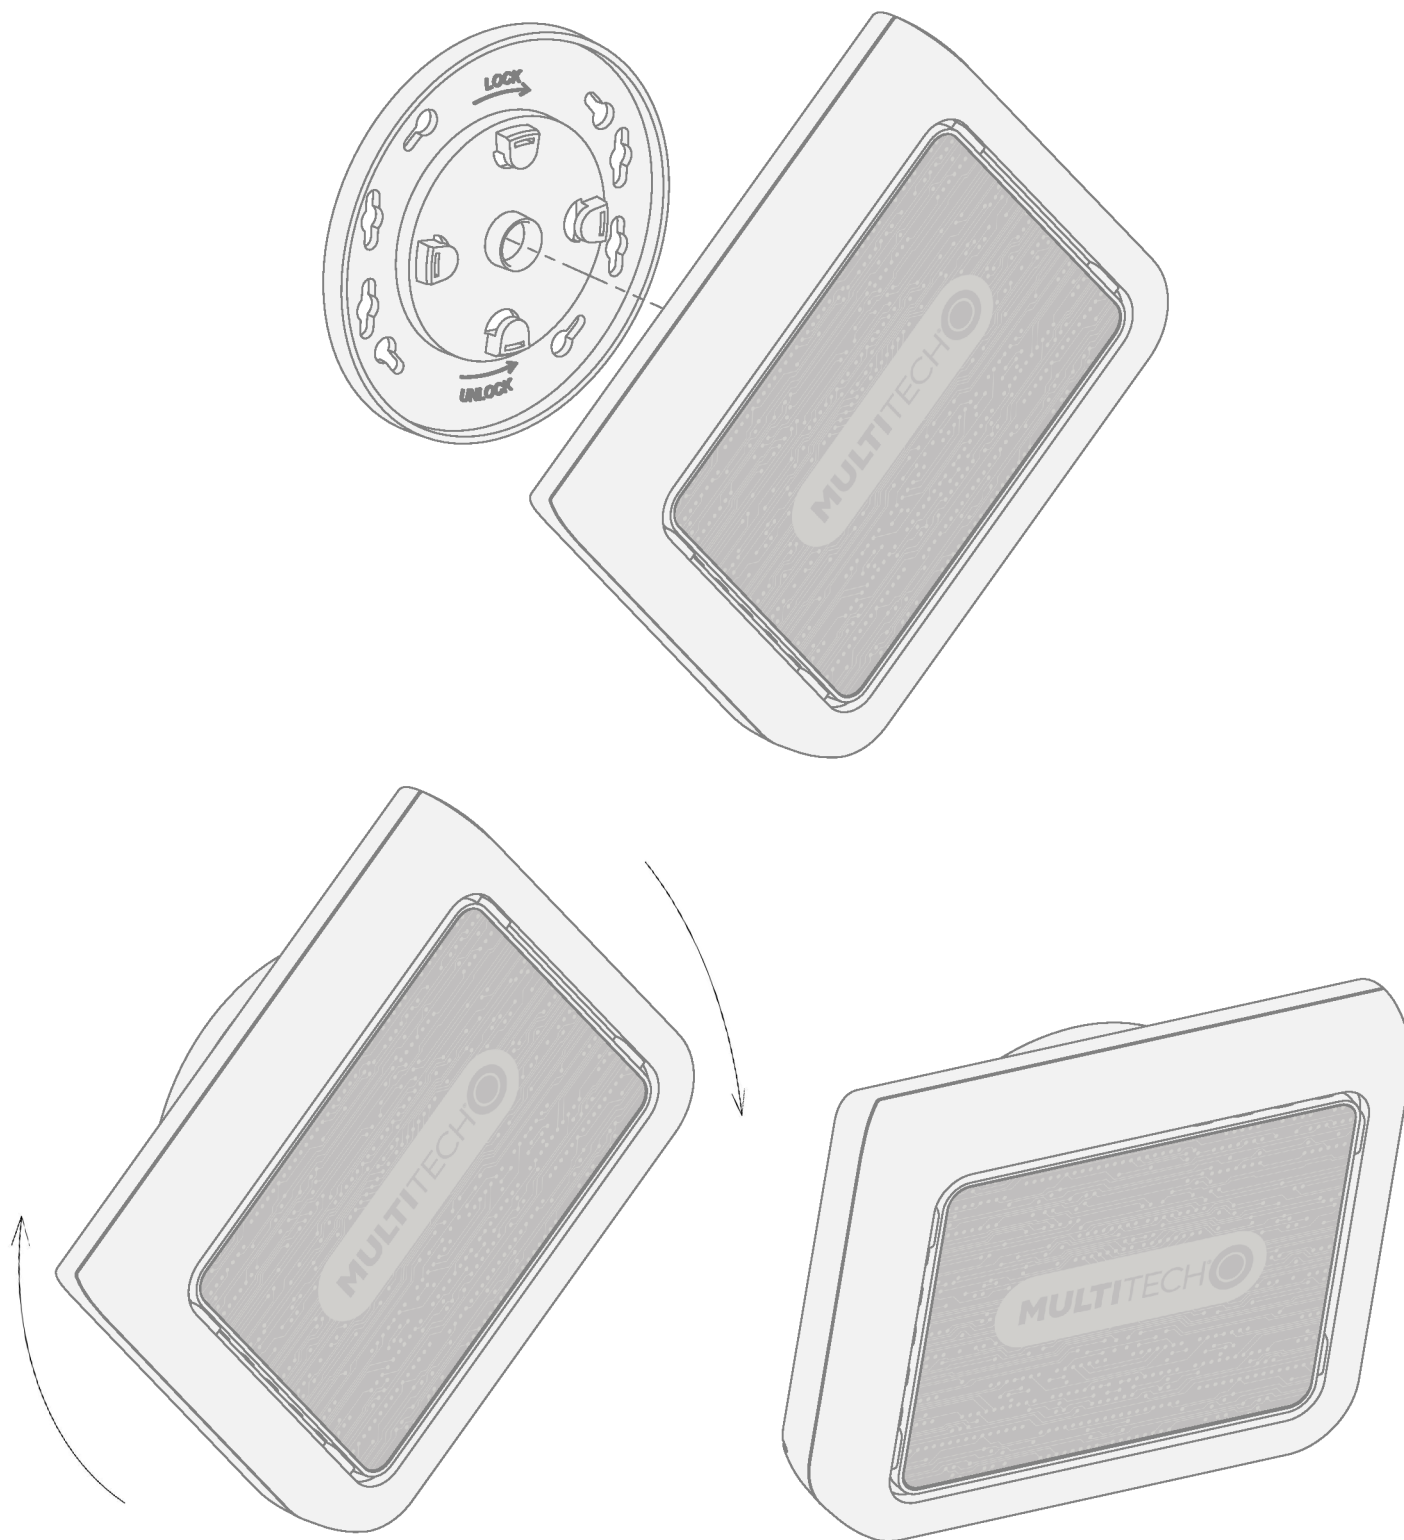

Chapter 9 – Chapter 6 Regulatory and Environmental Information

47 CFR Part 15 Regulation Class B Devices

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Interference Notice

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

Industry Canada Class B Notice

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement Canadien sur le matériel brouilleur.

This device complies with Industry Canada license-exempt RSS standard(s). The operation is permitted for the following two conditions:

1. the device may not cause interference, and
2. this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

1. l'appareil ne doit pas produire de brouillage, et
2. l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Industry Canada

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

1. l'appareil ne doit pas produire de brouillage, et
2. l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Waste Electrical and Electronic Equipment Statement

Note: This statement may be used in documentation for your final product applications.

WEEE Directive

The WEEE Directive places an obligation on EU-based manufacturers, distributors, retailers, and importers to take-back electronics products at the end of their useful life. A sister directive, ROHS (Restriction of Hazardous Substances) complements the WEEE Directive by banning the presence of specific hazardous substances in the products at the design phase. The WEEE Directive covers all MultiTech products imported into the EU as of August 13, 2005. EU-based manufacturers, distributors, retailers and importers are obliged to finance the costs of recovery from municipal collection points, reuse, and recycling of specified percentages per the WEEE requirements.

Instructions for Disposal of WEEE by Users in the European Union

The symbol shown below is on the product or on its packaging, which indicates that this product must not be disposed of with other waste. Instead, it is the user's responsibility to dispose of their waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or where you purchased the product.

July, 2005



REACH Statement

Registration of Substances

After careful review of the legislation and specifically the definition of an “article” as defined in EC Regulation 1907/2006, Title II, Chapter 1, Article 7.1(a)(b), it is our current view that Multi-Tech Systems, Inc. products would be considered as “articles.” In light of the definition in § 7.1(b) which requires registration of an article only if it contains a regulated substance that “is intended to be released under normal or reasonably foreseeable conditions of use,” our analysis is that Multi-Tech Systems, Inc. products constitute nonregisterable articles for their intended and anticipated use.

Substances of Very High Concern (SVHC)

Per the candidate list of Substances of Very High Concern (SVHC) published October 28, 2008 we have reviewed these substances and certify the Multi-Tech Systems, Inc. products are compliant per the EU "REACH" requirements of less than 0.1% (w/w) for each substance. If new SVHC candidates are published by the European Chemicals Agency, and relevant substances have been confirmed to be greater than 0.1% (w/w), Multi-Tech Systems, Inc. will provide updated compliance status.

Multi-Tech Systems, Inc. also declares it has been duly diligent in ensuring that the products supplied are compliant through a formalized process which includes collection and validation of materials declarations and selective materials analysis where appropriate. This data is controlled as part of a formal quality system and will be made available upon request.

Restriction of the Use of Hazardous Substances (RoHS)



Multi-Tech Systems, Inc.

Certificate of Compliance

2011/65/EU

Multi-Tech Systems, Inc. confirms that its embedded products comply with the chemical concentration limitations set forth in the directive 2011/65/EU of the European Parliament (Restriction of the use of certain Hazardous Substances in electrical and electronic equipment - RoHS).

These MultiTech products do not contain the following banned chemicals¹:

- Lead, [Pb] < 1000 PPM
- Mercury, [Hg] < 1000 PPM
- Hexavalent Chromium, [Cr+6] < 1000 PPM
- Cadmium, [Cd] < 100 PPM
- Polybrominated Biphenyl, [PBB] < 1000 PPM
- Polybrominated Diphenyl Ether, [PBDE] < 1000 PPM

Environmental considerations:

- Moisture Sensitivity Level (MSL) =1
- Maximum Soldering temperature = 260C (in SMT reflow oven)

¹Lead usage in some components is exempted by the following RoHS annex, therefore higher lead concentration would be found in some modules (>1000 PPM);

- Resistors containing lead in a glass or ceramic matrix compound.

Information on HS/TS Substances According to Chinese Standards

In accordance with China's Administrative Measures on the Control of Pollution Caused by Electronic Information Products (EIP) # 39, also known as China RoHS, the following information is provided regarding the names and concentration levels of Toxic Substances (TS) or Hazardous Substances (HS) which may be contained in Multi-Tech Systems Inc. products relative to the EIP standards set by China's Ministry of Information Industry (MII).

Hazardous/Toxic Substance/Elements

| Name of the Component | Lead (PB) | Mercury (Hg) | Cadmium (CD) | Hexavalent Chromium (CR6+) | Polybrominated Biphenyl (PBB) | Polybrominated Diphenyl Ether (PBDE) |
|----------------------------------|-----------|--------------|--------------|----------------------------|-------------------------------|--------------------------------------|
| Printed Circuit Boards | O | O | O | O | O | O |
| Resistors | X | O | O | O | O | O |
| Capacitors | X | O | O | O | O | O |
| Ferrite Beads | O | O | O | O | O | O |
| Relays/Opticals | O | O | O | O | O | O |
| ICs | O | O | O | O | O | O |
| Diodes/ Transistors | O | O | O | O | O | O |
| Oscillators and Crystals | X | O | O | O | O | O |
| Regulator | O | O | O | O | O | O |
| Voltage Sensor | O | O | O | O | O | O |
| Transformer | O | O | O | O | O | O |
| Speaker | O | O | O | O | O | O |
| Connectors | O | O | O | O | O | O |
| LEDs | O | O | O | O | O | O |
| Screws, Nuts, and other Hardware | X | O | O | O | O | O |
| AC-DC Power Supplies | O | O | O | O | O | O |
| Software /Documentation CDs | O | O | O | O | O | O |
| Booklets and Paperwork | O | O | O | O | O | O |
| Chassis | O | O | O | O | O | O |

X Represents that the concentration of such hazardous/toxic substance in all the units of homogeneous material of such component is higher than the SJ/Txxx-2006 Requirements for Concentration Limits.

O Represents that no such substances are used or that the concentration is within the aforementioned limits.

Information on HS/TS Substances According to Chinese Standards (in Chinese)

依照中国标准的有毒有害物质信息

根据中华人民共和国信息产业部 (MII) 制定的电子信息产品 (EIP) 标准—中华人民共和国《电子信息产品污染控制管理办法》(第 39 号), 也称作中国 RoHS, 下表列出了 Multi-Tech Systems, Inc. 产品中可能含有的有毒物质 (TS) 或有害物质 (HS) 的名称及含量水平方面的信息。

有害/有毒物质/元素

| 成分名称 | 铅 (PB) | 汞 (Hg) | 镉 (CD) | 六价铬 (CR6+) | 多溴联苯 (PBB) | 多溴二苯醚 (PBDE) |
|--------------|--------|--------|--------|------------|------------|--------------|
| 印刷电路板 | O | O | O | O | O | O |
| 电阻器 | X | O | O | O | O | O |
| 电容器 | X | O | O | O | O | O |
| 铁氧体磁环 | O | O | O | O | O | O |
| 继电器/光学部件 | O | O | O | O | O | O |
| ICs | O | O | O | O | O | O |
| 二极管/晶体管 | O | O | O | O | O | O |
| 振荡器和晶振 | X | O | O | O | O | O |
| 调节器 | O | O | O | O | O | O |
| 电压传感器 | O | O | O | O | O | O |
| 变压器 | O | O | O | O | O | O |
| 扬声器 | O | O | O | O | O | O |
| 连接器 | O | O | O | O | O | O |
| LEDs | O | O | O | O | O | O |
| 螺丝、螺母以及其它五金件 | X | O | O | O | O | O |
| 交流-直流电源 | O | O | O | O | O | O |
| 软件/文档 CD | O | O | O | O | O | O |
| 手册和纸页 | O | O | O | O | O | O |
| 底盘 | O | O | O | O | O | O |

X 表示所有使用类似材料的设备中有害/有毒物质的含量水平高于 SJ/Txxx-2006 限量要求。

O 表示不含该物质或者该物质的含量水平在上述限量要求之内。

Index

| | |
|---------------------------------------|-------|
| B | |
| build options | 5 |
| C | |
| CELL LED | 9 |
| cellular configuration | 20 |
| cellular connection on startup | 21 |
| certifications..... | 8 |
| Chinese hazardous substances | |
| Chinese version | 33 |
| English version | 32 |
| Class B | 29 |
| Industry Canada | 29 |
| configuration | 24 |
| connectors..... | 9 |
| D | |
| date | 19 23 |
| device | |
| maintenance | 14 |
| dimensions | 7 |
| documentation..... | 6 |
| E | |
| Ethernet | 9 17 |
| configuration..... | 20 |
| Ethernet ports | 12 |
| F | |
| FCC Notice | |
| Class B | 29 |
| G | |
| getting started..... | 19 |
| H | |
| hazardous substances | 31 |
| I | |
| Industry Canada | |
| Class B | 29 |
| interférence des radiofréquences..... | 13 |
| IP address | 20 24 |
| L | |
| labels | 16 |
| LEDs | 9 |
| lithium battery | 12 |
| login | |
| default..... | 23 |
| LoRa | |
| setup | 22 |
| LORA LED..... | 9 |
| M | |
| maintenance | 14 |
| mLinux..... | 19 |
| modem | |
| safety | 12 |
| mounting device | 26 |
| N | |
| network information..... | 24 |
| network settings | 20 |
| P | |
| package contents | 5 |
| password..... | 23 |
| Ports Ethernet | 12 |
| power jack..... | 9 |
| power measurements | 10 11 |
| power supply..... | 17 |
| PPP | |
| authentication..... | 24 |
| R | |
| radio frequency interference..... | 13 |
| receive sensitivity..... | 8 |
| remove | |

| | |
|--------------------|----|
| SIM card | 17 |
| reset button | 9 |
| reset device | 10 |
| RoHS | 31 |

S

| | |
|------------------------|----|
| safety | 12 |
| modem | 12 |
| RF interference | 13 |
| SIM card | |
| remove | 17 |
| SIM installation | 17 |
| specifications | 8 |
| static | 13 |
| STATUS LED | 9 |
| sécurité | 12 |

| | |
|------------------------|----|
| interférences RF | 13 |
|------------------------|----|

T

| | |
|--------------------------|-------|
| terminal interface | 19 |
| time | 19 23 |
| transmission | 8 |

U

| | |
|---------------------------|----|
| user responsibility | 15 |
|---------------------------|----|

W

| | |
|----------------|---|
| WIFI LED | 9 |
|----------------|---|